


INSTALLATION GUIDE

LOW GUARDRAIL B1-3

1

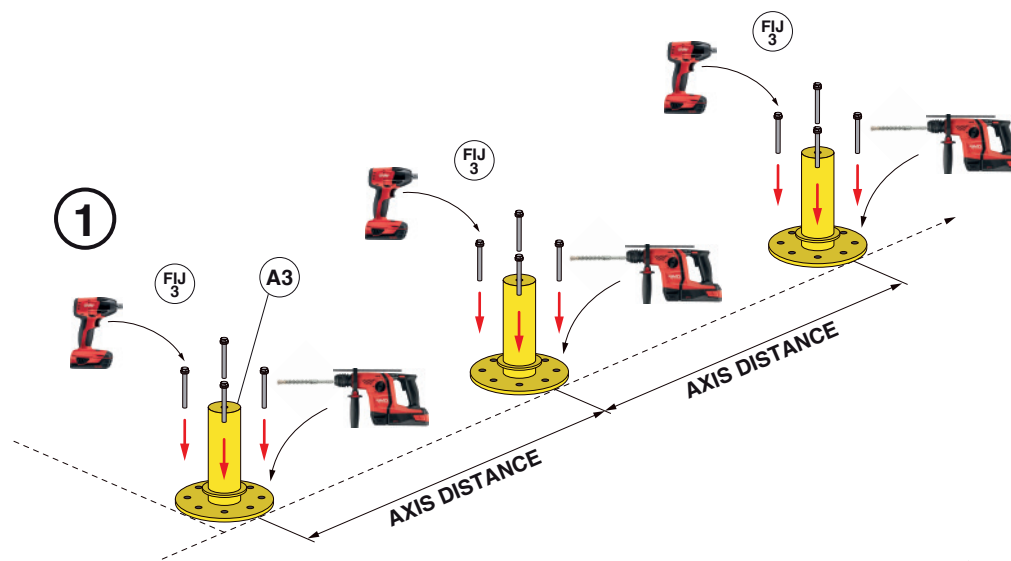

 **X4**
minimum
4 anchors per base

USE


6 1/4" x 1/2" Drill Bit



1/2" x 3/4" Socket



DUST VACUUM REQUIRED

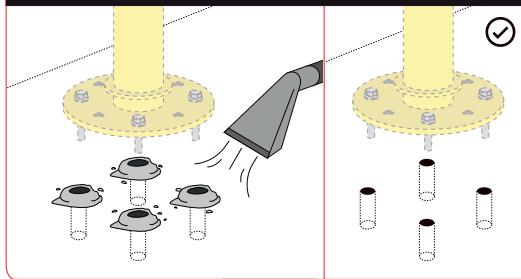

TOOLS



IMPACT WRENCH
HILTI SIW 22-A



ROTARY HAMMER
HILTI TE 6-A36

6 1/4" x 1/2" Drill Bit





1/2" x 3/4" Socket



30" Extension Socket

2

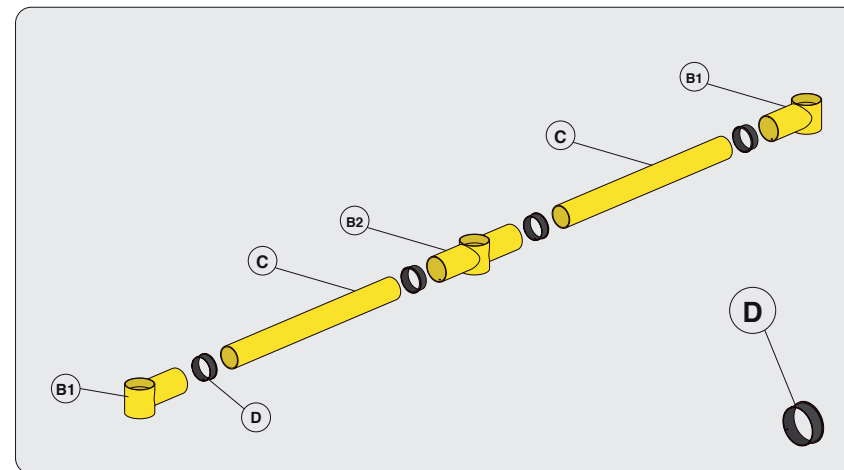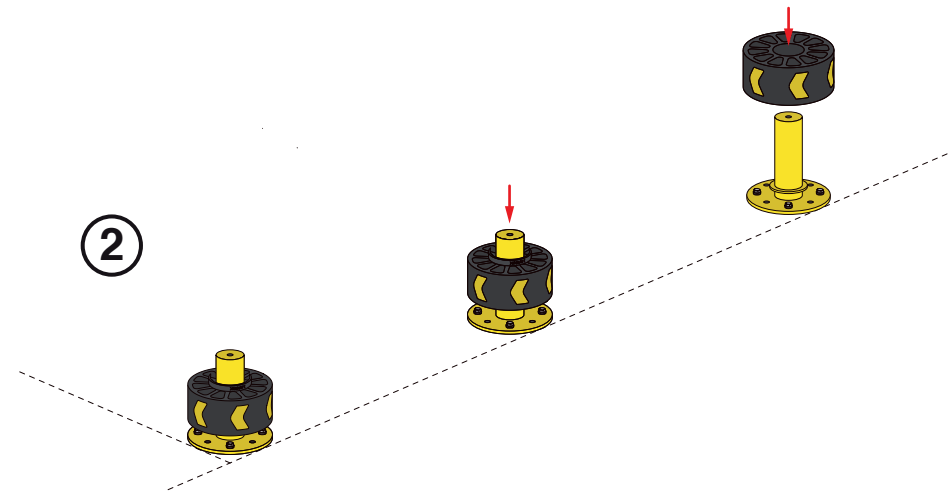

INSTALLATION GUIDE

LOW GUARDRAIL B1-3

PAGE
02 / 02

