


INSTALLATION GUIDE

STANDARD GUARDRAIL B3-3

1

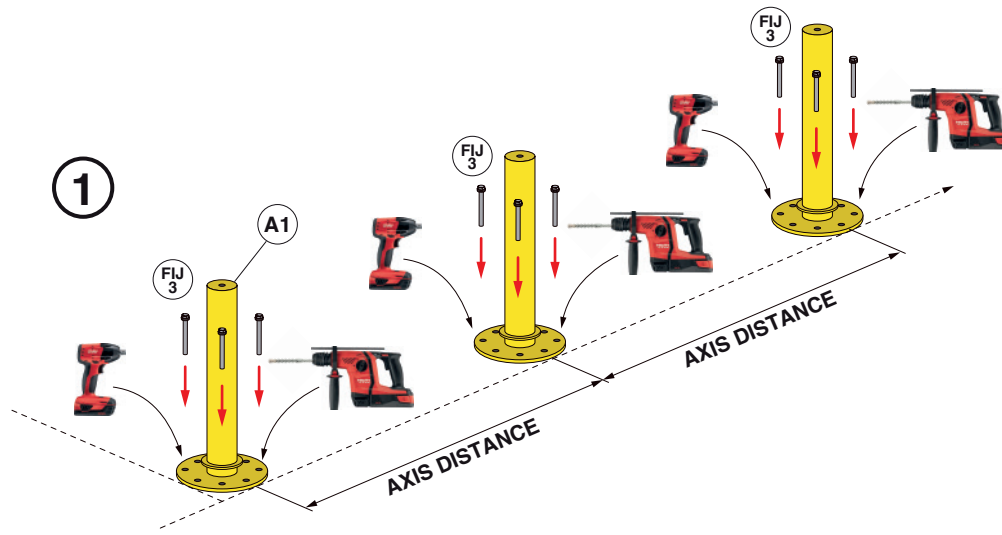

X4
minimum
4 anchors per base

USE


6 1/4" x 1/2" Drill Bit




1/2" x 3/4" Socket



DUST VACUUM REQUIRED

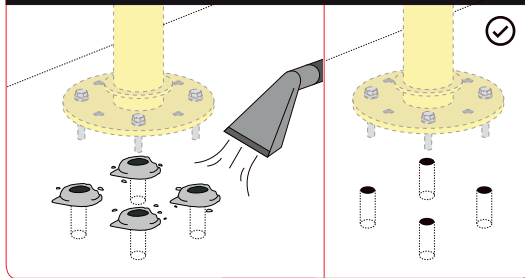

2

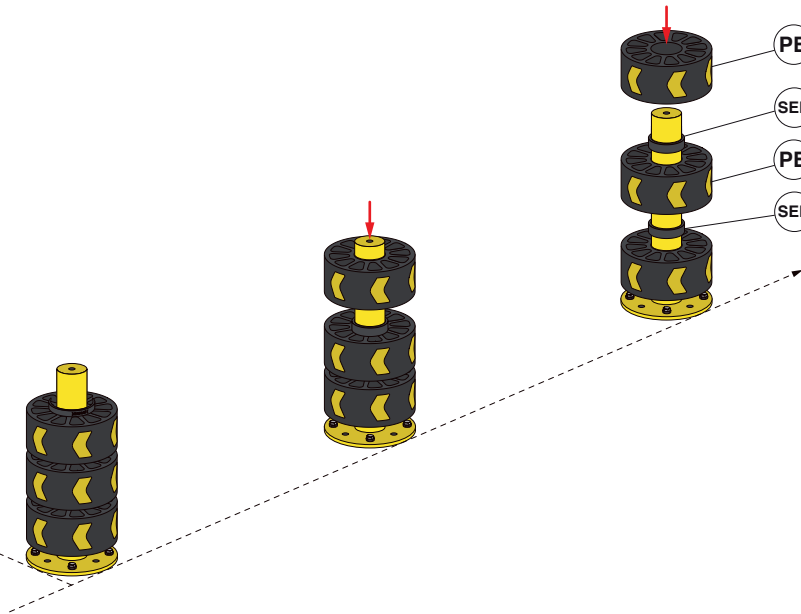

TOOLS



IMPACT WRENCH
HILTI SIW 22-A



ROTARY HAMMER
HILTI TE 6-A36


6 1/4" x 1/2" Drill Bit



1/2" x 3/4" Socket




30" Extension Socket

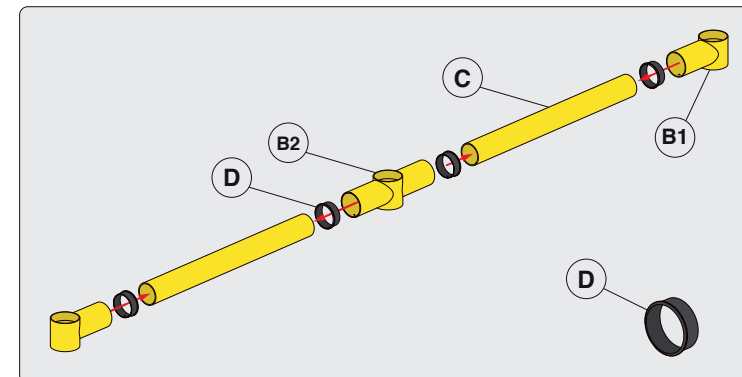

INSTALLATION GUIDE

STANDARD GUARDRAIL B3-3

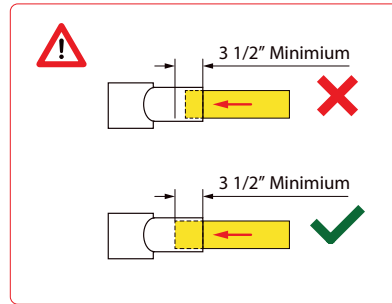

Insert crossbar at least 3 1/2"

